

### List of components

M4x20mm x 4	M5x20mm x 4
M4X45mm x 4	M5x45mm x 4
M4X55mm x 4	M5x55mm 4
3mm hex key x 1	4mm hex key x 1

M6x20m x 4	M8x20mm x 4
5mm hex key x 1	6mm hex key x 1

### Spacers


15x7.3x5 x 4	15x7.3x30 x 4
15x7.3x10 x 4	15x7.3x40 x 4

Penny washers	Standard washers
16x5.3x1.0 x 4	16x8.3x1.0 x 4

## 1. MOUNTING WALL PLATE

Remove security screw using the handle at the bottom of bracket and detach front plate. Mount wall plate (**FIG.1**) on wall in desired position using screws/bolts suitable to construction of the wall. (If in any doubt please consult a qualified builder). Attach screws/bolts through as many holes/slots as possible. There are a total of 18 fixing holes on the back plate, however the minimum amount of fixings that Raw International recommend is six. (If in any doubt as to strength of fixings please consult a qualified builder).

**FIG. 1**

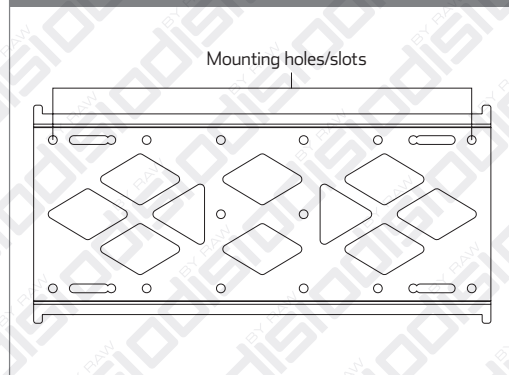


CONSULT AUTHORISED SERVICE PERSONNEL FOR THE INSTALLATION OF THIS UNIT. INSTRUCTIONS MUST BE FOLLOWED PRECISELY FOR SAFE AND STABLE INSTALLATION. RAW INTERNATIONAL ARE NOT LIABLE FOR ANY DAMAGE OR INJURY CAUSED BY MISHANDLING OR IMPROPER INSTALLATION.


## 2. ATTACHING FRONT PLATES TO THE PLASMA SCREEN

Place the screen face down on soft cloth (to prevent damage) on a flat surface. The fixings you use is dependent on the make and model of your screen. There are different sets of fixings supplied with the bracket. Only ONE set of fixings will be required. In order to ascertain which set of fixings will be required, screw fixings in the back of the screen before attempting to attach front plates. Only ONE set of fixings will be of the correct diameter for your screen. It is important that the front plates are fixed as centrally as possible to screen. To help achieve this, there is a 3mm hole in the centre of each of the front plates. Line this hole up so it is equal distance between the top and bottom fixings on the back of the screen (**FIG.2**). Once it is lined up, the nearest fixing hole on the front plates to the top fixing on the screen are the ones that should be fixed first using appropriate screws/washers/isolators/spacers (**FIG.3**). Then fix the bottom two fixings through the slots using appropriate screws/washers/isolators/spacers. Please use an Allen key to tighten all four fixings. Only use isolators if back of screen is not flush with the front plates.

**FIG. 2**

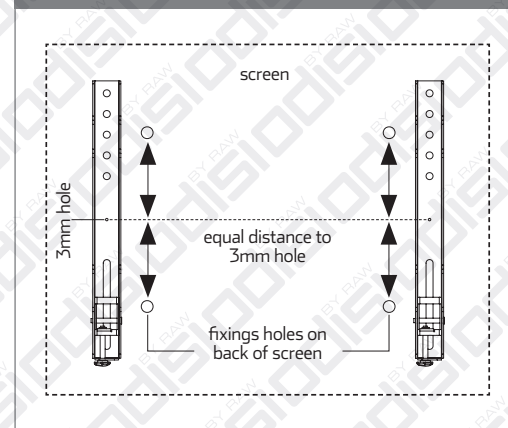


**FIG. 3**

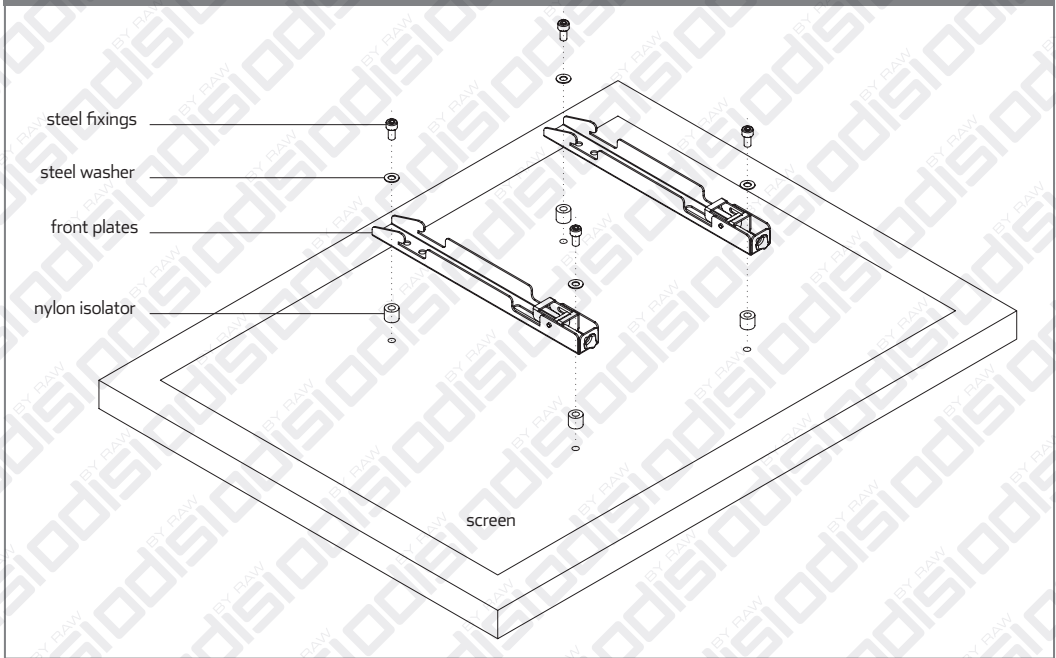

## 3. ENGAGING SCREEN WITH THE WALL

Lift the display (minimum 2 people) with front plates attached so that the slots on the back of the front plates engage with the slot on the wall mounting plate (**FIG.4**), the screen is now safely suspended.

**FIG. 4**

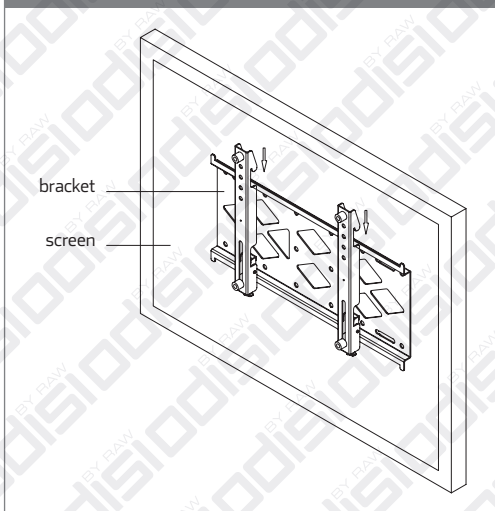

## 4. SECURITY

Once the screen is safely suspended, please tighten the handle at the bottom of the front plates. This engages the front plates to the wall mounting plate to ensure the screen cannot be lifted from the wall (**FIG.5**).

**FIG. 5**

